

Unit	Start of Production	End of Production	End of Service	Downloads	Replacement unit
1200S24	1990	2017	2027	Manual	No
1200S48 *	1991	2017	2027	Data sheet Manual	No
150SX15-15	1993	2017	2027	Manual	No
150SX200- 200 *	1993	2017	2027	Data sheet Manual	No
150SX5 *	1993	2017	2027	Data sheet Manual	No
150SX75-75 *	1993	2017	2027	Data sheet Manual	No
240S24 *	1989	2017	2027	Data sheet Manual	No
30S15-15	1979	1997	2007	On demand	No
30S5	1979	1997	2007	On demand	No
5U15-15(B)	1997	2017	2027	Manual	No
5U5 *	1997	2017	2027	Data sheet Manual	No
5U5B	1997	2017	2027	Manual	No
600S24 *	1991	2017	2027	Data sheet Manual	No
60S5	1982	1993	2003	On demand	No
75S15-15	1982	1993	2003	On demand	No
75SX15-15	1992	2017	2027	Manual	No
75SX5	1992	2017	2027	Manual	No
AL24-48 *	1987	2017	2027	Data sheet	No
BA150 *	1992	2017	2027	Application note	No
BA75 *	1992	2017	2027	Application note	No
BK12-1	1982	1984	1994	On demand	No
BK15-15	1980	1999	2009	On demand	No
BK5-10	1979	1984	1994	On demand	No
C12-2	1969	1975	1985	On demand	No
C30-0.2	1969	1974	1984	On demand	No
C30-1	1969	1975	1985	On demand	No

Unit	Start of Production	End of Production	End of Service	Downloads	Replacement unit
C5-5	1974	1978	1988	On demand	No
C60-0.1	1969	1988	1998	On demand	No
CD15-1D	1969	1978	1988	On demand	No
CS100	1974	1994	2004	On demand	No
CST100	1974	1994	2004	On demand	No
CV15-2	1974	1987	1997	On demand	No
CV30-1	1970	1975	1985	On demand	No
D015-1.5	1964	1970	1980	Manual	ES030-5
D030-0.3	1966	1976	1986	On demand	ES030-5
D030-1	1964	1970	1980	Manual	ES030-5
D050-0.5	1964	1970	1980	Manual	ES075-2
D050-10	1964	1975	1985	On demand	SM70-AR-24
D08-1	1967	1971	1981	On demand	ES015-10
D10	1968	1983	1993	On demand	No
D1, D1D & D2	1970	1975	1985	On demand	No
D5	1964	1975	1985	On demand	No
E015-2	1970	2001	2011	On demand	ES015-10
E015-20	1974	1984	1994	On demand	SM18-50
ES018-0.6	1974	2001	2011	On demand	EST150
E0300-0.1	1974	2001	2011	On demand	ES0300-0.45
E030-1	1970	2001	2011	On demand	ES030-5
E030-10	1974	1984	1994	On demand	ES030-10
E030-3	1970	1993	2003	On demand	ES030-5
E060-0.6	1970	2001	2011	On demand	ES075-2
E060-6	1974	1980	1990	On demand	SM70-AR-24
EK030-10	1985	1996	2006	On demand	ES030-10
ES030-5 gen1	1993	2000	2010	On demand	ES030-5
L24-1.5	1980	1987	1997	On demand	No
L5-5	1977	1991	2001	On demand	No
LD15-1	1977	1987	1997	On demand	No
LT30B	1981	1987	1997	On demand	No
LT30C	1981	1987	1997	On demand	No
M12-2.5	1972	1986	1996	On demand	No
M15-16HE	1987	2004	2014	On demand	No
M24-10	1970	1986	1996	On demand	240S24 *
M24-12HE	1986	2004	2014	On demand	240S24 *
M24-20HE	1986	2004	2014	On demand	600S24 *
M48-10HE	1986	2004	2014	On demand	1200S48 *
M5-10	1970	1986	1996	On demand	No
M60-4	1972	1986	1996	On demand	No

Unit	Start of Production	End of Production	End of Service	Downloads	Replacement unit
M60-5HE	1986	2004	2014	On demand	No
MS015-20	1973	1981	1991	On demand	No
MS030-10	1973	1981	1991	On demand	No
MS5-30	1974	1980	1990	On demand	No
MST030-10	1973	1981	1991	On demand	ES030-10
MST15-20	1973	1981	1991	On demand	SM18-50
MT24-10	1972	1975	1985	On demand	240S24 *
MTC155	1972	1975	1985	On demand	No
MV30-6	1974	1985	1995	On demand	240S24 *
PSC232	1995	2003	2013	On demand	RS232
PSC44M	1987	2003	2013	On demand	IEEE488
PSC625	1983	1992	2002	On demand	No
RA10 *	1987	2017	2027	At request	No
S15-18	1987	2017	2027	Manual	No
S24-10	1980	1988	1998	On demand	No
S28-10	1987	2017	2027	Manual	No
S5-40	1980	1988	1998	On demand	No
S6-40	1987	2017	2027	Manual	No
SM120-13 gen1	1997	2005	2015	Manual	SM120-13
SM120-25D *	1991	2017	2027	Data sheet Manual	SM330-AR-22
SM15-100 gen1	1997	2005	2015	Manual	SM15-100
SM15-200D *	1991	2017	2027	Data sheet Manual	SM18-220
SM1540-D	1989	2007	2017	Manual	SM18-50
SM3004-D	1989	2007	2017	Manual	SM400-AR-4
SM300-5 gen1	1998	2005	2015	Manual	SM300-5
SM30-100D *	1991	2017	2027	Data sheet Manual	SM66-AR-110
SM300-10D *	1991	2017	2027	Data sheet Manual	SM330-AR-22 SM660-AR-11
SM3540	1985	1997	2007	On demand	SM35-45
SM35-45 gen1	1997	2005	2015	Manual	SM35-45

Unit	Start of Production	End of Production	End of Service	Downloads	Replacement unit
SM45-70D *	1991	2017	2027	Data sheet Manual	SM66-AR-110 SM100-AR-75
SM52-30 gen1	1991	2017	2027	Manual	SM52-30 SM52-AR-60
SM6020	1981	1989	1999	On demand	SM70-AR-24
SM7020-D	1989	2007	2017	Manual	SM70-AR-24
SM70-22 gen1	1997	2005	2015	Manual	SM70-22
SM70-45D *	1991	2017	2027	Data sheet Manual	SM100-AR-75
SMX7220	1985	1997	2007	On demand	SM70-22
ST150 *	1994	2017	2027	Manual	No
ST60(A)	1982	1998	2008	Manual	ST150 *
TPS015-1.5	1960	1964	1974	On demand	ES015-10
TPS030-10	1961	1965	1975	On demand	ES030-10
TPS12-1	1962	1965	1975	On demand	ES015-10
TPS24-5	1961	1965	1975	On demand	ES030-5
TPS6-1	1962	1965	1975	On demand	ES015-10
TPS050-5	1961	1965	1975	On demand	SM70-AR-24
U15-250	1976	1984	1994	On demand	No
U5-10	1968	1970	1980	On demand	No
U5-1000A	1976	1991	2001	On demand	5U5 *
UCS50(B) *	1997	2017	2027	Data sheet Manual	No
UD5-200A	1976	1983	1993	On demand	No
VE11	1967	1975	1985	On demand	No
VE21	1967	1975	1985	On demand	No
VE22	1967	1975	1985	On demand	No
VE28	1968	1975	1985	On demand	No