

# **Regatron**

## **USB-Driver**

### **Installation Instructions**

**Rev 1.1**

## Document History

Datum	Changes	Rev.	Author
10.05.07	Creation	1.0	MK
12.08.11	Changes for new certified driver 6.3.0.0 01072011 for Windows XP	1.1	HI

## Table of Contents

1. Important! Before connecting.....	3
2. Installation.....	3
2.1. Windows XP.....	3
3. Connecting.....	5
3.1. Windows XP.....	5
4. Deinstallation.....	5
4.1. Windows XP.....	5

# 1. Preparatory Work

## Important!

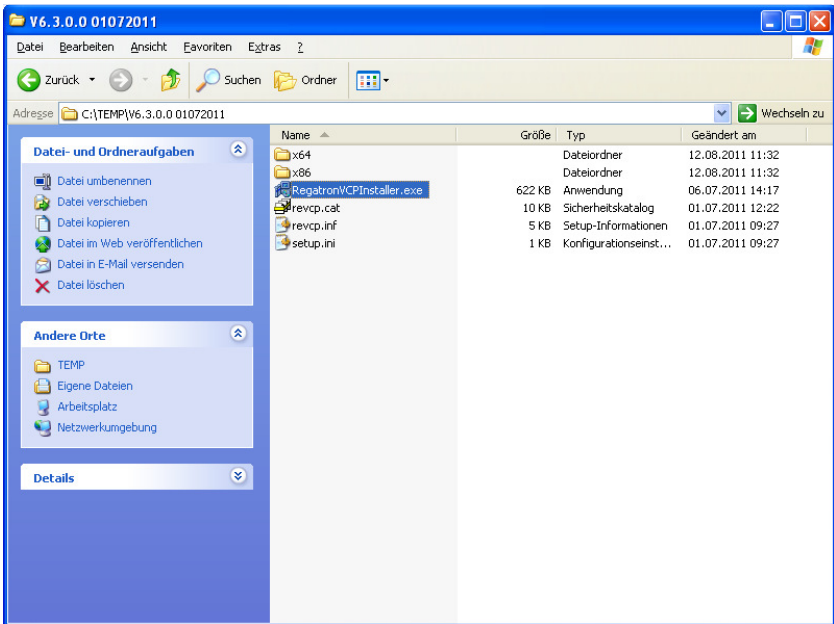


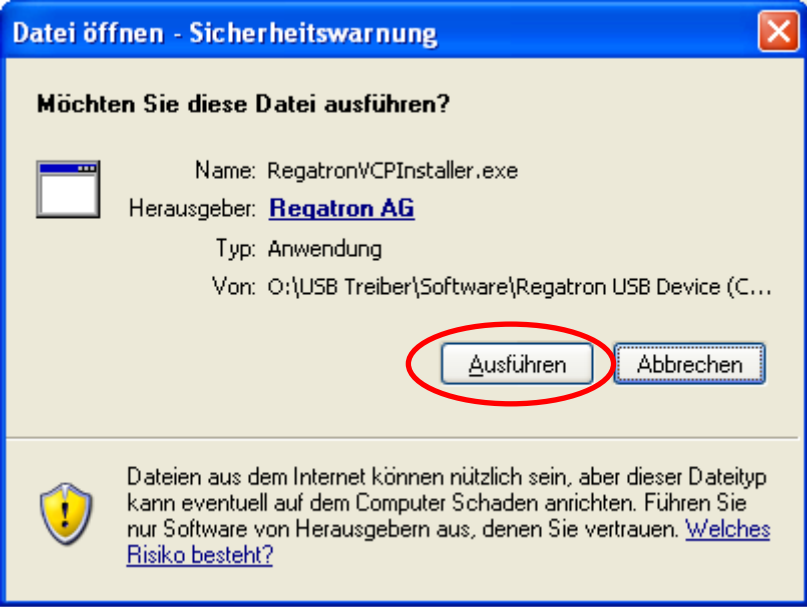
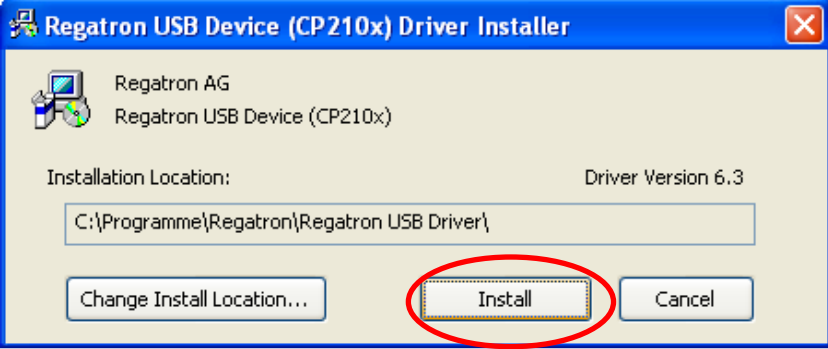
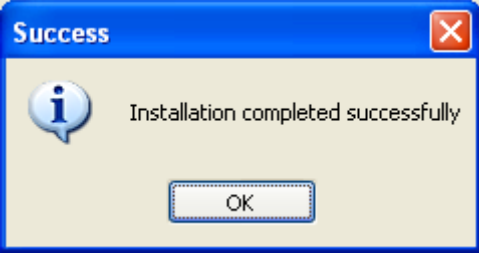
**Before connecting the TopCon to the PC via the USB-interface you MUST install the “preinstaller” for the “Regatron-USB-Device-Driver”!**

- You MUST have *admin rights* on the PC you want to install the USB-Device-Driver on.
- Uninstall all Regatron USB drivers (Control panel | software).
- Restart your PC.
- Make sure that the Regatron USB driver is indeed removed.

# 2. Installation

## 2.1. Windows XP

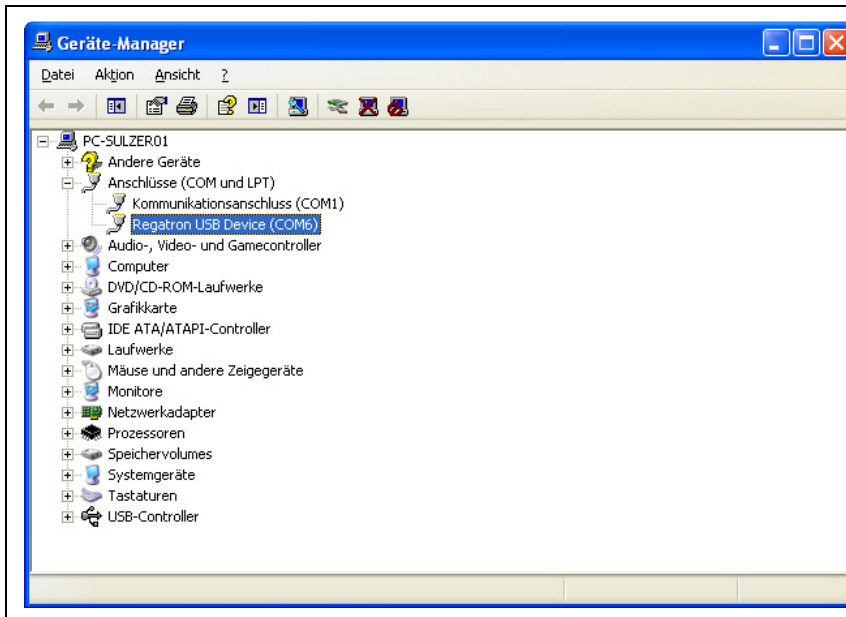
	<p>Unzip the “Regatron USB Device Vx.xx.x.xxxx xxxxxxxx.zip” into folder “C:\Temp”</p>
	<p>Start the “Regatron VCPInstaller.exe” in “C:\Temp”</p>

	<p>This security dialog appears localized.</p> <p>Click on “Ausführen” (execute)</p>
	<p>Commonly the default location is appropriate.</p> <p>Click on “Install”</p>
	<p>The remaining parts of the installation continue automatically.</p> <p>Installation is completed</p>

Afterwards, you might want to remove the temporarily stored files from “C:\Temp” (or whatever folder was chosen in the beginning).

## 3. Connecting

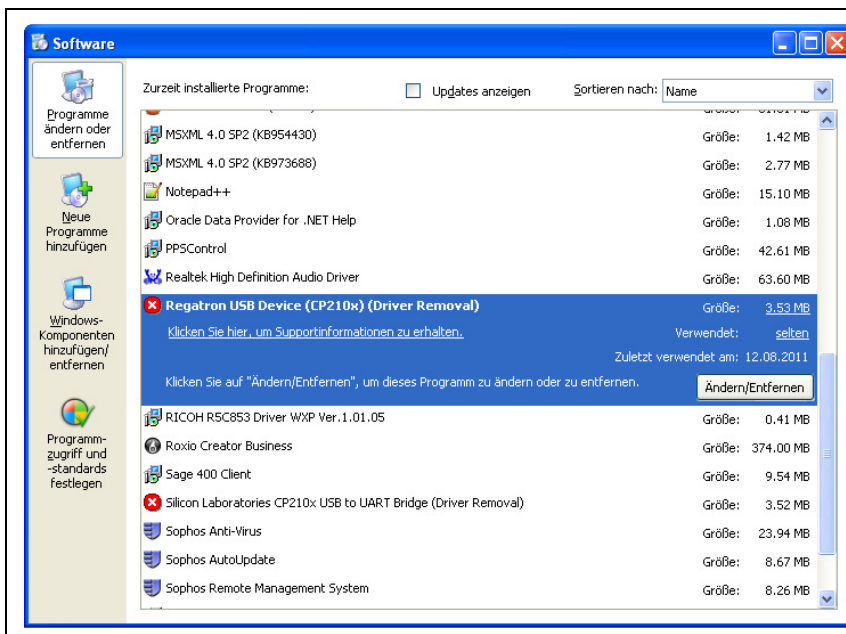
### 3.1. Windows XP



To be sure the device is connected have a look at windows the device- manager

## 4. Deinstallation

### 4.1. Windows XP



Uninstall Regatron USB-Device with standard Windows tool

	<p>Click "Uninstall"</p>
	<p>Restart your computer ("Yes")</p>